



MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

BPSY-0231 Stays, Side Cover R, Monkey



Monkey

Fitting Instruction BPSY-0231 Stays, Side Cover R, Monkey

For ease of assembly, the stays BPSY-0231A & B are supplied with the bolts/clips etc. already fitted to their installed positions.



BPSY-0231A


1) Remove the seat by removing the 2x M8 bolts at the front of the seat.




- 2) Secure the stay BPSY-0231A to the frame using the M8 button head bolt. Just nip the bolt up finger tight at this stage.**



- 3) Secure the stay to the plastic 'luggage box' using the M6 screw, washers and M6 nylok nut. Again, just finger tight.**

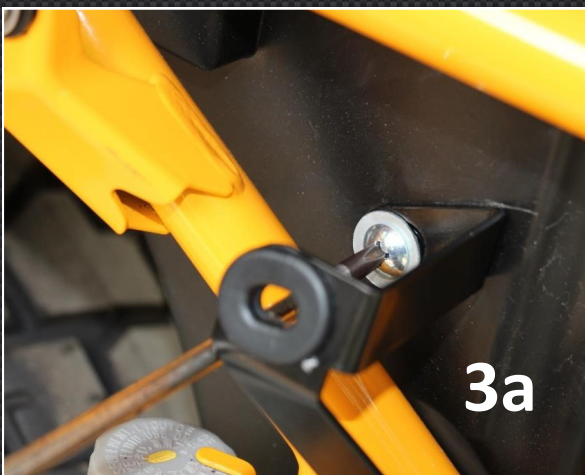

3a

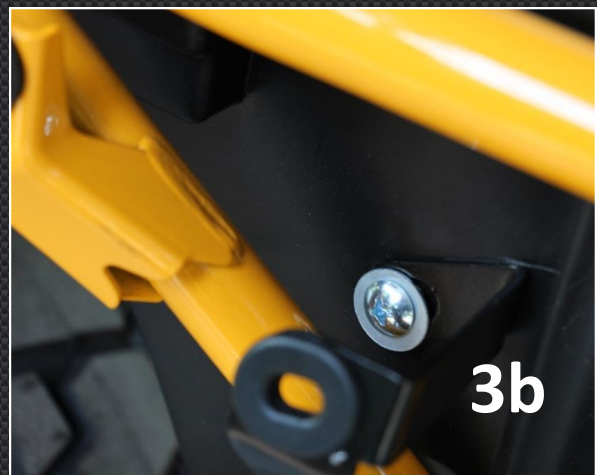

3b




3c

- 4) Remove the M6 screw from the M6 clip so that we can offer up the R. Cover to check fit. Some adjustment may be necessary.



- 1) Remove the two bolts that retain the ignition coil.

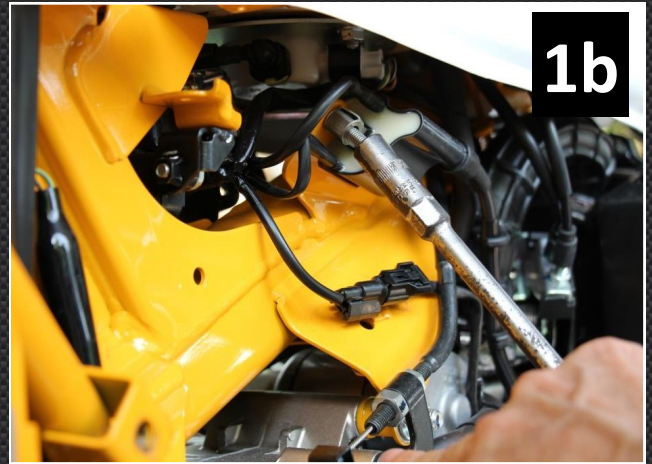

- 2) The stay BPSY-0231B is located atop the coil and is secured with the 2x M6 cap head bolts and washers provided.



Now offer up the R. Cover (BPCC-7142R) and check that the **spigots** line up with the rubber grommets, and that the M6 clip on the underside lines up with the **hole** in the R. Cover.



Make adjustments to the position of BPSY-0231A if necessary, and tighten the bolts/screws securely.



Press on the R. Cover by pushing the spigots into the rubber grommets, and tighten the M6 screw on the underside securely.

Now you are ready to cruise the town!



www.tyga-performance.com